




Installations guide 451110-00

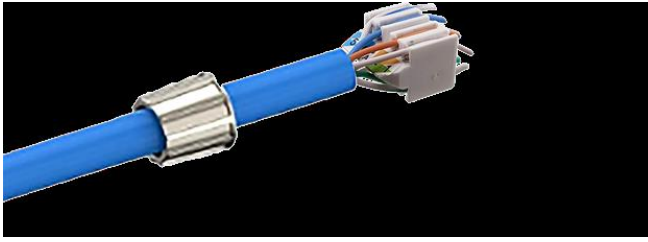

① Cut off the excess wires

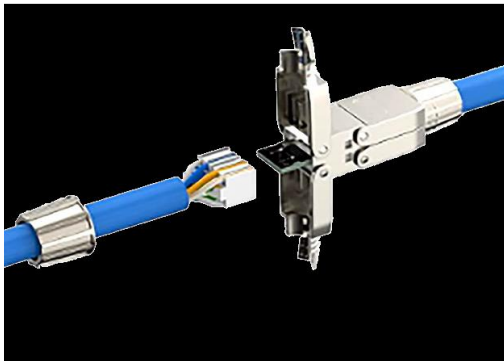


② Insert it into the PCB

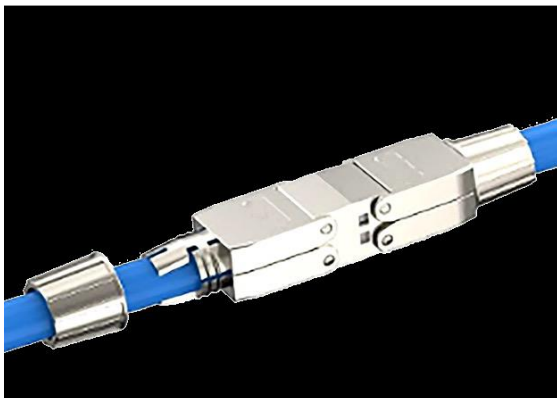

③ Close the outer housing and
tighten the strain relief boot



④ Assembly finished

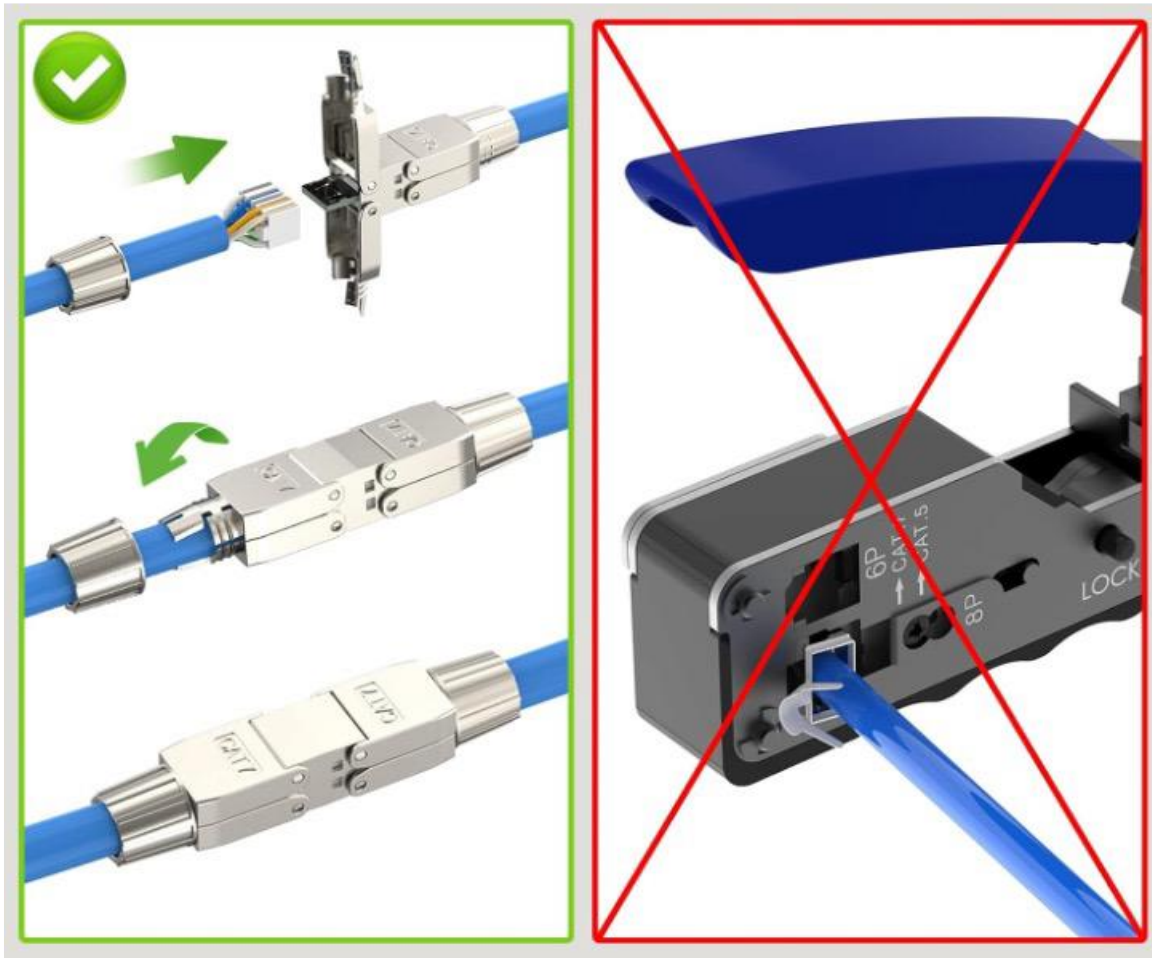

ELPROMAN