


TNC3100P-0316

TNC Plug Crimp

50Ω

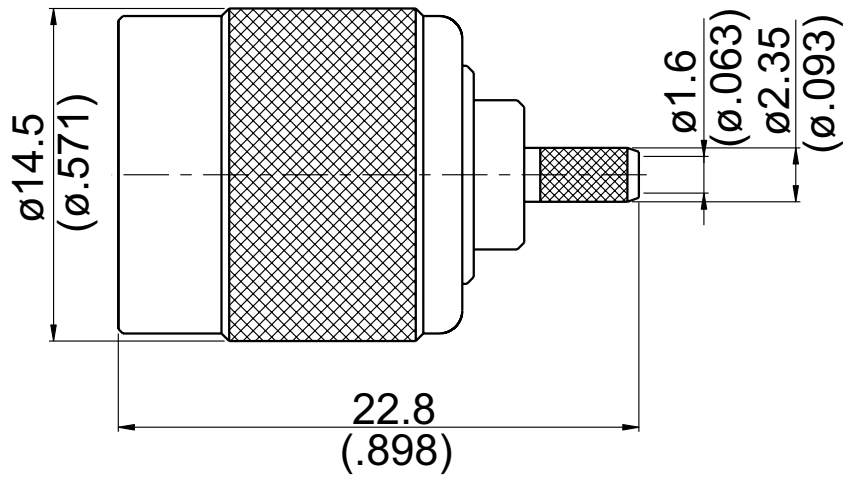

| Parts | Material | Plating (Micro-inch) |
|--------------|----------|--|
| Ferrule | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Contact Pin | Brass | Gold 3 Over Nickel 50 Over Copper 50 |
| Gasket | Silicon | |
| Washer | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Insulator | Teflon | |
| Body | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |
| Coupling Nut | Brass | Tin-Zinc-Copper-Alloy 100 Over Copper 50 |


Weight: 10.70 g

Suitable Cables: RG174, RG188, RG316, RG316-E, RG316-FEP

This part number complies with RoHS.

CABLE ASSEMBLY INSTRUCTION

TNC3100P-0316

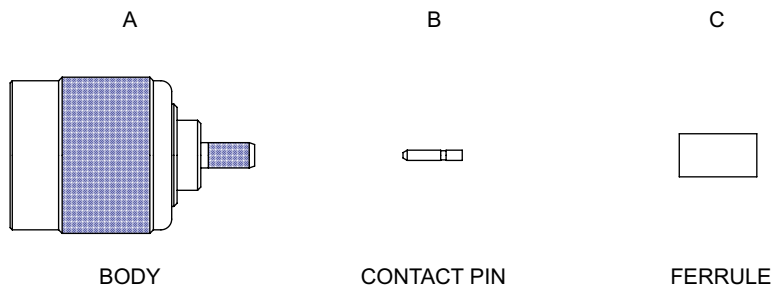


| DIAGRAM | ASSEMBLY INSTRUCTION |
|---------|--|
| | <p>Step 1: STRIP AS SHOWN .</p> |
| | <p>Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT PIN " B " ON CENTER CONDUCTOR AND CRIMP IN " Y " .</p> |
| | <p>Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.</p> |
| | <p>Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP.</p> |

This part number complies with RoHS.

CABLE ASSEMBLY INSTRUCTION

TNC3100P-0316

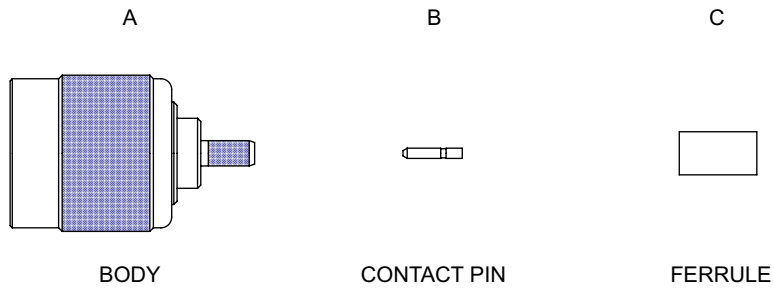

| DIAGRAM | ASSEMBLY INSTRUCTION |
|---------|---|
| | <p>Step 1: STRIP AS SHOWN .</p> |
| | <p>Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT PIN " B " ON CENTER CONDUCTOR AND CRIMP IN " Y " .</p> |
| | <p>Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.</p> |
| | <p>Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP.</p> |

This part number complies with RoHS.